

Utility Module

IQ-9600




The IQ-9600 Utility Module secures and standardizes the integration of couplers, isolators, filters and Bragg gratings into the IQ-200 Optical Test System. Without it, these passive optical components end up loose on the workbench and may be damaged or misaligned.

The IQ-9600 Utility Module consists of empty IQ module frames designed to house non-electronic elements (there are no electrical connections) in the IQ-200 Optical Test System. The module comes with tie wraps, brackets and holders for mounting components. Choose from two models: the IQ-9601 single-slot or the IQ-9602 dual-slot modules.

To help you easily develop your test setup, EXFO has integrated singlemode couplers often required in monitoring, EDFA testing and other fundamental applications. Several couplers are available: 1 x 2 couplers, with different coupling ratios (50/50, 25/75, 1/99, 5/95, 10/90), as well as 1 x 4 and 1 x 8 arrangements. The package includes a polished angled (EA) or non-angled (EI) connector, compatible with EXFO's Universal Interface (EUI).

Simplified EDFA test setup

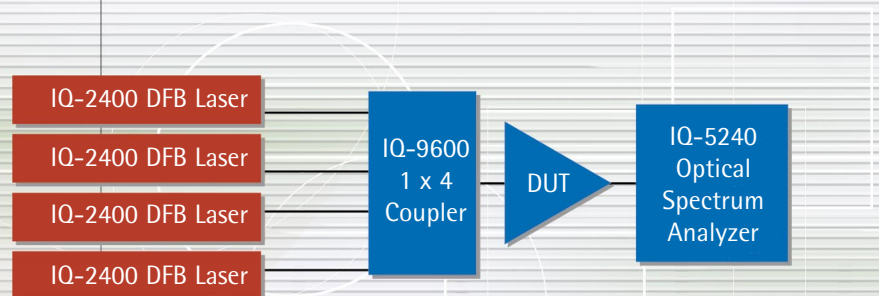

Fiber-optic T&M,
monitoring, manufacturing
and assembly solutions

EXFO

